

# NEWACALOX 858D

## SMD REWORK STATION User Manual

Welcome to use the serial superior products of our company! Our products 858D use the brush-less fan, and long life and low noise. It is very good for shielding box and PCB. Please read this operating instruction manual carefully before using the serial products of our company. Thank you!

### Features

- 1.The products adopt closed loop of transducer. intelligent drive. Digital LED display. High-power. The temperature turn up is very fast. Temperature stabilization and is impervious to air. Use the brush-less fan, and long life and low noise. It is good for lead free work too.
- 2.The air flow can be adjustable, and air blowing is big and gentle blowing plastic components will not deformed. Such as buzzer and external interface of mobile phone.
- 3.Due to the handle have Precision Horizontal Sensor, When you pick up the handle ,tube nozzle toward up, the gun will automatically step into standby model.
- 4.Automatic to blow cool air to safe the heating. Temperature rapidly rises, and it can reach to the setting temperature only within 3 or 5 seconds. Small volume, light weight, temp-control accurately.
- 5.Safely remove BAG-IC, keep pins intact. Much more safe and reliable. Blowing PCB will not make it blister.

### Specification

|                               |                                 |                         |        |
|-------------------------------|---------------------------------|-------------------------|--------|
| Model                         | NEW858D                         |                         |        |
| Type                          | LED indicator light             |                         |        |
| Power Consumption             | 700W                            |                         |        |
| Blower Fan                    | Brush-less Fan                  |                         |        |
| Amount Of Wind                | 120L/m(MAX)                     |                         |        |
| Temperature Range             | 100℃-500℃                       |                         |        |
| Discharge Feature             | LED indicator light             |                         |        |
| Handle Length<br>(With Cable) | 120cm                           |                         |        |
| Size                          | 12.4(h)*18.7(w)<br>*24.9(l)(cm) | 13.8(h)*10(w)*15(l)(cm) |        |
| Weight                        | 2.20kg                          | 1.52kg                  | 1.55kg |
| Noises                        | <45db                           |                         |        |

### Usage

- 1.Suitable for unsoldering multiple component, such as SOIC, CHIP, QFP, PLCC and BGA etc. (especially for flat cables and cable connectors).
- 2.Applicable for hot contraction, heating, depainting, deluging, defrosting, Preheating and rubber soldering, and so forth.

## Operation Instruction

- 1.To put unsoldering equipment ready, and leave handle on the holder.
- 2.To connect the power.
- 3.To set the best nozzle(large caliber nozzle preferred)
- 4.To switch on the power, the screen displays "----",it represents standby mode.  
858D
- 5.To press ↑ or ↓ button(revolving switch)as to set up the temperature.  
858D
- 6.To hold the handle, so the equipment begins to heat. To adjust the revolving switch of airflow in order to select suitable airflow, and begin to operate normally while the temperature is stable.
- 7.To put back the handle on the holder after the work; mean while,the unsoldering equipment switch for heating mode to cooling heating element mode automatically. While the temperature is lower than 100℃,the screen displays "----",it stands for switching to standby mode, and after the temperature of Heating element is less than 70℃,the equipment is on standby(If there is airflow out, it means the temperature is higher than 70℃;and there is no airflow only after the temperature is lower than 70℃).
- 8.To switch off the power and unplug if there is no operation for a long period of time.

## Cautions:

Try to set up temperature as lower as possible and the airflow as much as possible as to keep heating element working longer and protect IC chips.

## Setting Up Temperature

- 1.Unsoldering equipment with luminous discharge tube display indication:  
\*To turn the temperature control switch to the required mark.
- 2.Unsoldering equipment with microcomputer digital LED visual display:  
\*To press ↑ or ↓ button(revolving switch),the screen displays the temperature while the power is on.  
\*To press ↑ once (revolving clockwise),the temperature degree is added 1℃,the screen displays the temperature ;to press ↓ once(revolving anticlockwise),the temperature degree is subtracted 1℃,and if ↑ or ↓ button is pressed continuously, the temperature will increase or decrease rapidly. After the button is released, the screen display set temperature for two seconds and then displays current temperature or "----",the standby mode.

## Note: Explanation Symbols

- A."----" represents the temperature is lower than 100℃,standby mode, and the handle is on the holder.
- B."S-A" represents there is problem of the sensor, so the heating element(Inc. Heating material and components)shall be replaced.
- C."S-A" represents there is problem of the memory, so the memory(it can save the set temperature

for 100 years)shall be replaced.


D.The temperature is lower than 50°C and no raise of it while it is working, which represents there is problem of the heating element, so the heating element(Inc. Heating material and components)shall be replaced.

## **Terms of User**

- 1.The air outlet and its surrounding area may be very hot. Be cautious of scald.
- 2.The heating handle shall not be put on the working table or other place except its holder.
- 3.To keep the air outlet unblocked.
- 4.To put the heating handle on its holder after work, and keep it cool naturally to the standby mode, then switch off the power.
- 5.The distance between the air outlet and the object shall be no less than 2mm.
- 6.To choose suitable blast nozzle in accordance with working requirements.  
Different blast nozzle may have different temperature.

## **Replacement of Heating Element.**

- 1.The heating element shall be replaced during its cooling condition.
- 2.To fasten two screws fixed on the handle as illustrated.
- 3.To disassemble the component of the handle, and then take out the handle cover.
- 4.Move the equipment's gently and screw off three screws used for fixing the terminal board.
- 5.To turn over the terminal board and disconnect the connection from it, and be careful of the connection.
- 6.To take out the heating element and mica paper caving it from the steel tube, and not to break the ground connection.
- 7.To wrap the new heating element with mica paper, and insert it into the steel tube, and be careful of correct installation.
- 8.To connect the connection in accordance with its former position.
- 9.To install the handle.

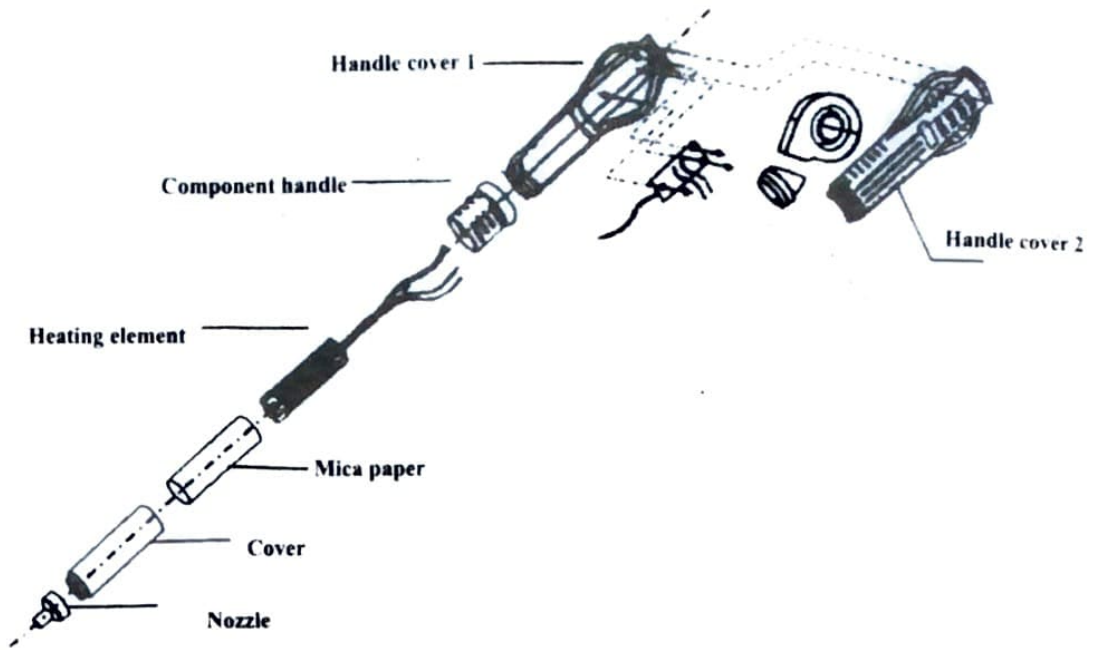

## Attention:

1. Do not break the ground connection on the steel tube during the replacement of heating element.
2. Do not break the connection on the Unsoldering Equipment during the replacement of heating element.
3. The link assembly on the handle cover shall be put inside of fixing hole on the steel tube during the installing of handle components.

**SUPPORT**  
**support@newacalox.com**